



COMPETITION

BEDIENUNGSANLEITUNG - NOTICE D'UTILISATION - OPERATING INSTRUCTIONS



512.5330

-  Mini-Heißluft-Gebläse
-  Mini pistolet à air chaud
-  Mini hot air gun
-  Mini pistola de aire caliente
-  Mini pistola ad aria calda
-  Mini varmluftpistol
-  Mini opalarka
-  Mini heteluchtpistool
-  мини термовоздушный пистолет
-  ري غص ن خ اس عاوه س د س م

DE/TTE/NST/18-05-2026

KS Tools Werkzeuge und Maschinen GmbH • Seligenstädter Grund 10 –12 • 63150 Heusenstamm - GERMANY
e-mail: customerservice@competitiontools.com • www.competitiontools.com

KS Tools • PDA Région de Brumath • 1, rue de Londres • 67670 Mommenheim - FRANCE
e-mail : contact@competitiontools.com • www.competitiontools.com



Introduction

Dear Customer,

You have chosen a product from KS Tools. Thank you for your trust. This guide contains all the information you need to use the product safely and correctly. Please therefore read the instructions thoroughly before use and always follow the guidance provided. These instructions form part of the article and should therefore be kept in such a way that they remain undamaged.

If you have any queries or require further information, please contact: customerservice@competitiontools.com

1. Terms of use

The manufacturer accepts no liability for personal injury or damage to property resulting from unauthorised or improper use.



Please follow the vehicle manufacturer's instructions!

2. Technical specifications

Level 1:	260°C
Level 2:	450°C
Performance:	350 watts
Voltage:	230–240 V
Frequency:	50 Hz
Cable length:	1.8 m

3. Safety and Instructions for Use

Tools must generally only be used for their intended purpose, under the specified conditions and within the limits of their intended use.

3.1 Important safety instructions

Please take a few minutes before use to read all the important information carefully.

For your own safety, please observe all safety guidelines and warnings. Please keep these instructions for future reference.

3.2 Warning

- To avoid the risk of fire and electric shock, please do not use this product in wet or damp conditions.
- Please wear gloves and eye protection, as the nozzle gets extremely hot.
- For your safety, please read the manual carefully.



- Please wear work gloves at all times.
- Do not touch hot surfaces.
- Always wear safety goggles when removing paint.
- Please do not wear loose-fitting clothing or jewellery.
- Please wear non-slip shoes and a hairnet.
- Look after the device at all times.
- Keep the pistol grip clean, dry and free from oil and grease.
- Please use the device or accessories only for their intended purpose.
- Always place the appliance in an upright position.
- Never use the tool in wet environments or rooms with high humidity, e.g. bathrooms, steam rooms, etc.
- Check the cable regularly for damage.
- Damage must only be repaired by authorised service personnel.
- If the tool is used outdoors, only use extension cables marked 'W-A'.
- When working on a small or irregularly shaped component, please secure and fasten it appropriately to prevent accidents.
- To prevent the appliance from switching on accidentally, unplug it from the mains when not in use.
- Stay alert and always ensure that you use this device with common sense.
- Please do not operate this device if you are tired or are taking medication that makes you drowsy.
- Please always wear the protective equipment required by the UVV.

3.3 When removing paint or varnish

Never use the appliance with chemical products.

Clean the nozzle and scraper after use, as they may catch fire. Use only in well-ventilated areas; residues of lead-based paint are toxic.

4. How it works

Before starting work, please take a few minutes to read all the operating and safety instructions carefully.

4.1 Shapes of PVC pipe

When you are ready to start, plug the appliance in and turn the temperature control dial to the desired setting.

Once you have switched on the hot-air gun, allow it a few minutes to reach the desired temperature.

During this process, you can place the device in the specified upright position. Please ensure that the surface is level.

When working with PVC materials, care must be taken to ensure that the nozzle is always held at a consistent and appropriate distance from the workpiece.

Please keep your hands well away from the extremely hot nozzle.



4.2 Easy removal of paint and varnish

Switch on the appliance and allow it to reach its full heating capacity.

Hold the nozzle a few centimetres away from the painted surface for a few seconds; the paint will soften and start to bubble.

Please take care not to heat the material in one spot for a prolonged period, as this could cause the surface to burn. The burnt paint would be more difficult to remove.

Always wear eye protection when working with paints and varnishes.

PLEASE NOTE:

- Never use the device against people or animals.
- Never use the heat gun near flammable materials or gases.
- Never block the flow of hot air.

5. Maintenance

Faulty or defective spare parts may cause damage.

6. Control

All tools must be checked for damage.

7. Disposal

The tool must be disposed of or recycled in accordance with the relevant national legislation.



8. Warranty and Service

The KS Tools Werkzeuge und Maschinen GmbH warranty applies to all tools used under normal operating conditions.

The following are excluded from the warranty:

- Consumables, e.g. all types of cutting tools, grinding inserts and discs, cutting and scraping tools, brooms, brushes, files, batteries, rechargeable batteries, bits or bit sockets, rotor blades in pneumatic tools, insulators on heating coils, all types of fuses, carbon brushes, etc.
- Malfunctions of parts subject to wear and tear resulting from normal use or other natural causes, as well as defects in the tool attributable to wear and tear resulting from normal use or other natural causes.
- Defects in the tool resulting from failure to follow the operating instructions, improper use, use under abnormal environmental conditions or inappropriate operating conditions, overloading or improper maintenance. This also includes defects in tools caused by the use of accessories or other parts that are not genuine KS Tools parts.
- Tools to which changes or additions have been made.
- Minor deviations from the specified quality, which are, however, of no significance to the value and serviceability of the tool.

The warranty period is 12 months in the case of commercial use or use of a similar nature. The warranty period begins on the date of purchase by the commercial end customer. The date on the original receipt is what counts. For technical products covered by a limited warranty (Types A, B and C), the user must always provide proof of purchase, stating the device's serial number where available.

The warranty is valid, subject to the type of warranty, for the period specified in the price list valid on the date of purchase of the product.

WARRANTY EXPLANATION

If the product is not covered by the warranty (due to the warranty period having expired or exclusion from the warranty for the reasons listed above), but repair is possible, it will only be carried out once the user has approved the quote.

Any claims other than the right to have defects rectified, as set out in this warranty, are expressly excluded from this warranty.