

BEDIENUNGSANLEITUNG - OPERATING INSTRUCTIONS - NOTICE D'UTILISATION



512.5010

-  **COMPETITION Hydraulischer Stahl-Wagenheber, 2000 kg**
-  **COMPETITION Hydraulic steel trolley jack, 2000 kg**

DE/TTE/HBA/01-07-2025



Introduction

Dear customer!

We are very pleased that you decided to purchase this product from KS Tools. Thank you for your confidence in us. You can find all the information you need in these operating instructions. Please read the instructions completely with care and observe the advice given. The operating instruction is part of the item and should be kept intact.

If you have any uncertainties or further questions, please contact: customerservice@kstools.com

1. Provisions for use

The manufacturer is not liable for personal injuries and material damages which result from improper use.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. Pay heed to the vehicle manufacturer's specifications!

2. Technical data

max. Capacity	2,0 t
Lift height min.	127 mm
Lift height max.	330 mm
Stroke way	200 mm
Weight	8,5 kg
Product dimensions L x W x H	435 x 190 x 127 mm
Type of tire	steal wheels

3. Safety and usage instructions

Tools may in principle only be used for the purpose intended, under the conditions envisaged and within the limitations as to their use.

Save these instructions. For your safety, read, understand, and follow the information provided with and on this product before using. The owner and/or operator of this equipment shall have an understanding of save use/operating procedures before attempting to use. The owner and/or operator shall be aware that the use of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this device is authorized. If any doubts exists as to the safe and proper use of this product as outlined in this factory authorized manual, remove from service immediately.



5. Operation

5.1 Vehicle Preparation

1. Place vehicle on a hard, level surface, such as reinforced concrete, large enough to accommodate vehicle, jacks, jack stand and wheel dolly.
2. Chock all unlifted tires in both directions AND take every precaution necessary to ensure the set up is stable and will prevent all inadvertent vehicle movement.

5.2 Lifting the trolley jack

Refer to the operating instructions from the vehicle manufacturer to find the authorised lifting points on the vehicle.

1. Position the jack so that the saddle is centred and makes firm contact with the load application point.
2. Pump the lifter to raise it until the saddle is in contact with the vehicle. Check that the saddle is centred and makes firm contact with the load lifting point.
3. Continue pumping to raise the vehicle to the desired height.
4. After lifting, support the load with appropriately dimensioned axle stands before working on the vehicle.

5.3 Lowering the trolley jack

Carefully open the drain valve by slowly turning it anticlockwise.

6. Maintenance

Incorrect or defective replacement parts can lead to damage.

IMPORTANT: Use only a quality grade hydraulic jack oil. Avoid mixing different types of fluid and **NEVER** use brake fluid, turbine oil, transmission fluid, motor oil or glycerin. Improper fluid can cause failure of the jack and the potential for sudden and immediate loss of load.

6.1 Adding oil

- Place the jack on a level surface and lower the lift arm completely.
- Remove the bleed screw.
- Fill the oil reservoir until the oil level is just below the lower edge of the oil filler opening.
- Refit the bleed screw. Bleed the jack as described above.

6.2 Changing oil

- Open the drain valve completely by turning the handle anticlockwise as far as it will go. Remove the bleed screw.
- Turn the jack over so that the old oil drains out of the oil filler opening and the liquid can be drained into a suitable container.
Note: Dispose of the hydraulic fluid in accordance with local regulations.
- Fill in new oil through the oil filler opening.



8. Checks

All tools are to be checked for damage.

9. Disposal

The tool is to be disposed of or recycled in accordance with the legislation of the respective country.

10. Guarantee

The KS Tools Werkzeuge und Maschinen GmbH guarantee applies for all tools that are used under normal usage conditions.

The following are excluded from the guarantee:

- **Consumables** e.g. any type of cutting tools, cutting inserts and disks, cutting and scraping tools, brooms, brushes, files, batteries, bits or bit sockets, rotor blades in pneumatic devices, isolators on heating coils, any type of fuses, carbon brushes, etc.
- **Faulty functioning** of parts that show usage-related or other natural wear and tear, as well as tool defects that can be traced back to usage-related or other natural wear and tear.
- **Defects** in the tool that can be traced back to a failure to observe the operating instructions, improper use, use under abnormal environmental conditions or unsuitable operating conditions, overloading or improper maintenance.
Also defects in tools caused by the use of accessory parts or other parts that are not KS Tools original parts.
- Tools which have been modified or equipped with additions.
- Minor deviations from the intended quality that are however insignificant for the value and suitability for use of the tool.

The guarantee period is 12 months in cases of industrial or equal use.

The guarantee period starts on the date of purchase by the commercial end customer. The date of the original purchase receipt is decisive. For technical products with limited guarantee types A, B and C, the user must principally submit the purchase receipt in addition to the serial number of the device, if present.

The guarantee applies under consideration of the guarantee type for the duration specified in the price list valid on the day the product was purchased.

If no guarantee claim exists for the product (expiration of the guarantee time, guarantee exclusion for the reasons listed in Sec. 2) but the repair is still possible, this will only be carried out following approval of the cost estimate by the user.